

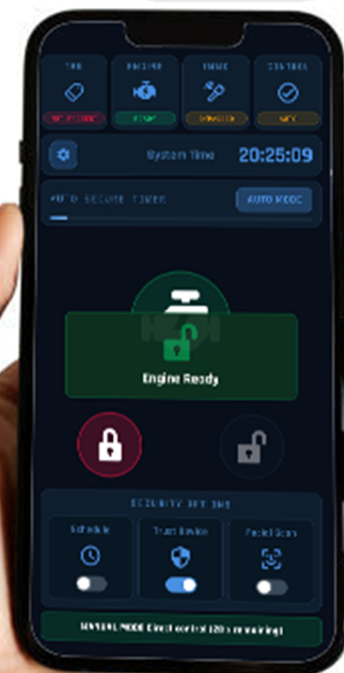


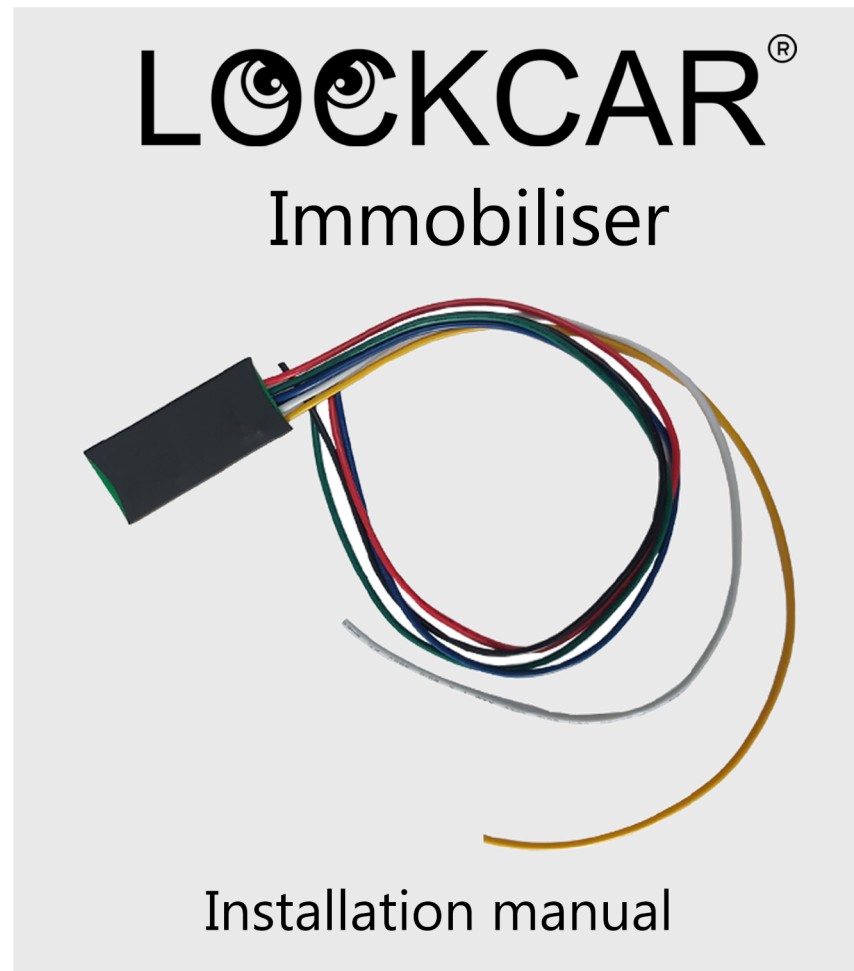

Immobiliser IC3262 Wire Installation

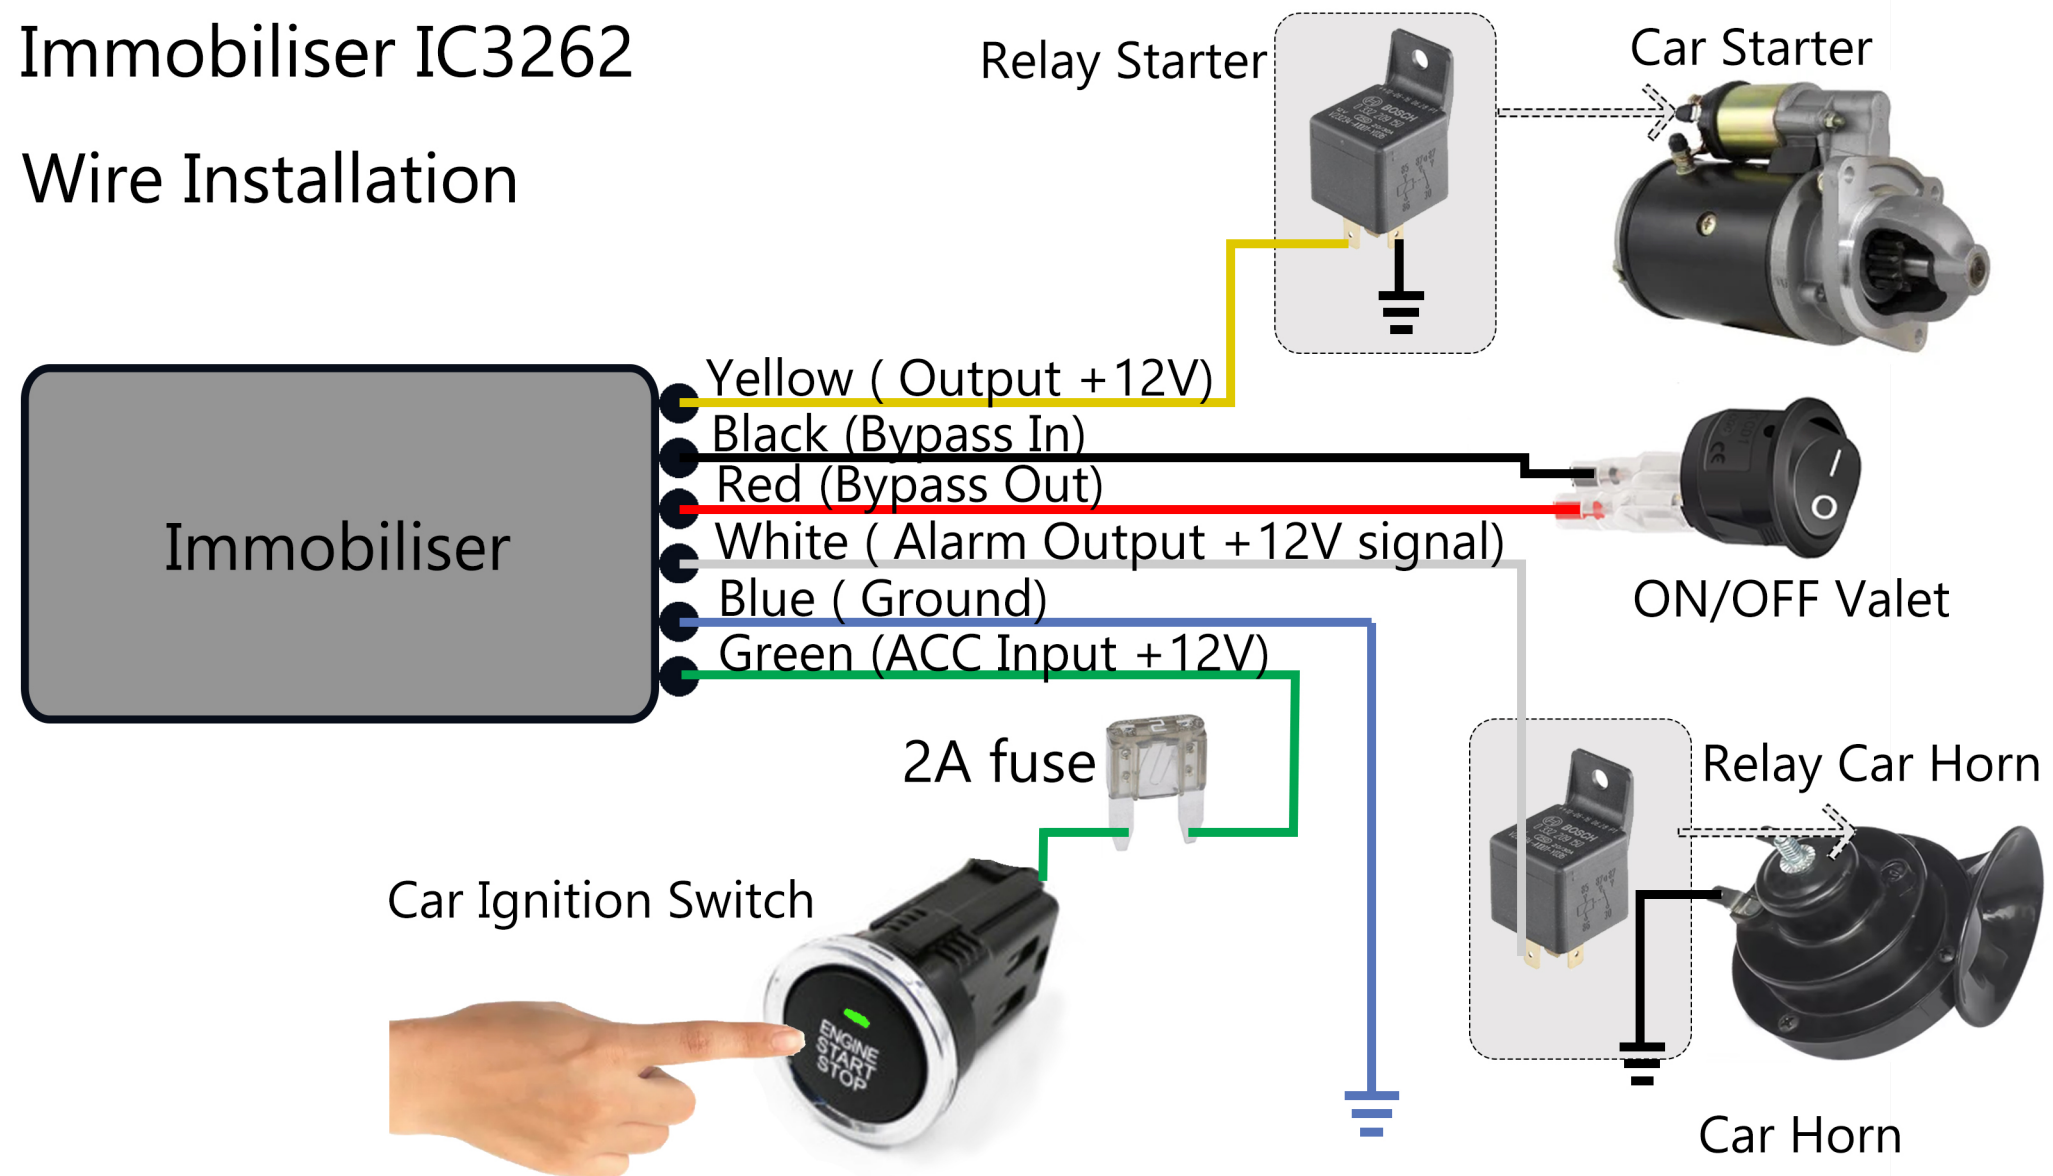


Technical Perimeter

1. Connect the green wire for immobiliser power from Ignition ACC through a 2 Amp fuse.
2. Cut the positive coil power wire from the relay that controls the starter and replace it with the yellow wire from the immobilizer.
3. The white wire connects to the car horn signal to alarm in case of unauthorized use the alarm is triggered.
4. The black wire and the red wire connect to the on/off button to be used in an emergency as an immobiliser bypass.




The maximum current used on the yellow wire must not exceed 2 Amps.

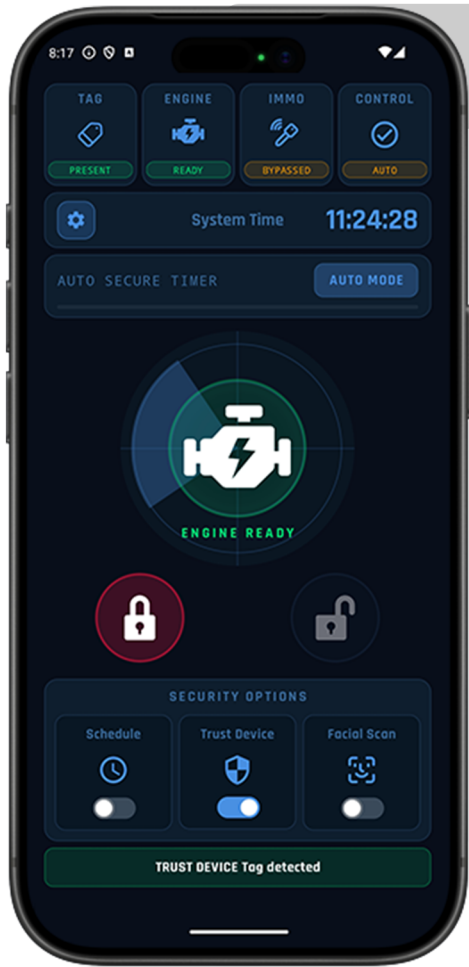


www.lockcar.co.uk

LockCAR IMMO User's Manual


Create an LockCAR
Account at:

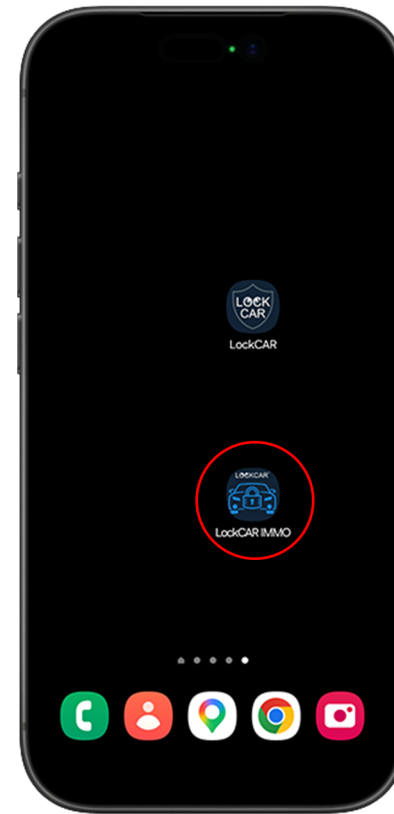


1. Install LockCAR
IMMO App from
mobile's Store

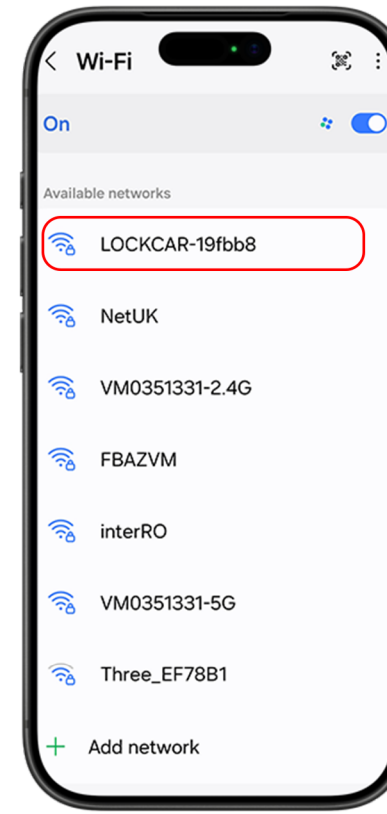


2. Connect to Wi-Fi
LOCKCAR-xxxx device's
network

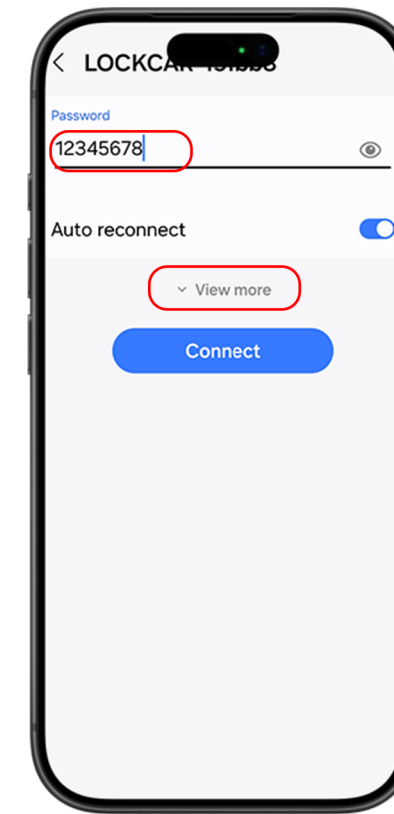


3. Enter default Password
and select View more to
setup the IP settings

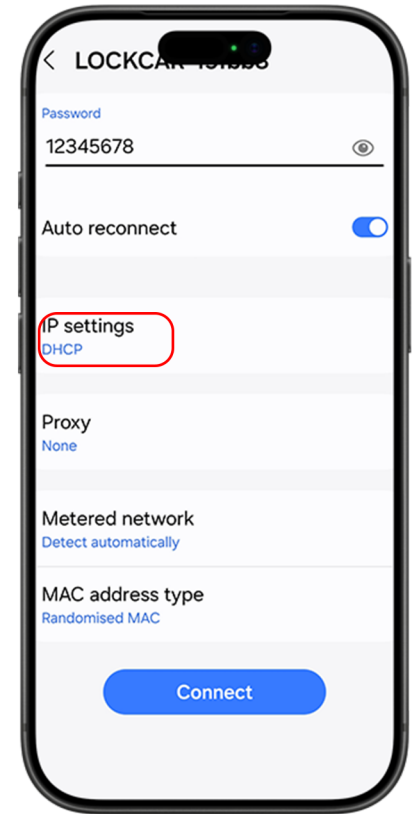


4. At IP settings
select IP settings
STATIC

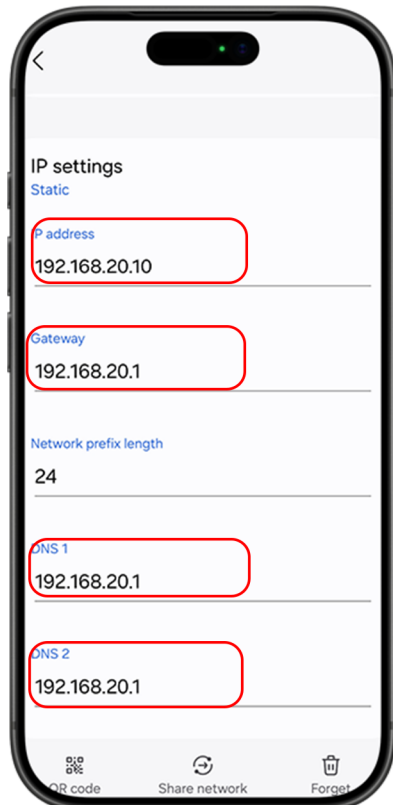

5. On IP STATIC put the
above IP's addresses
as shown.

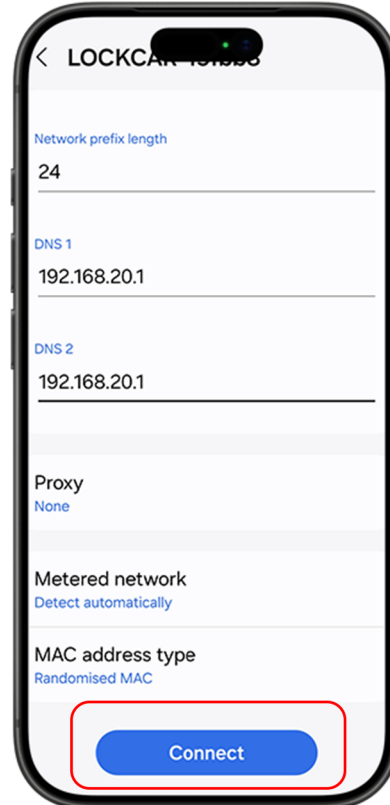


6. After all IP addresses
have been set,
click Connect.

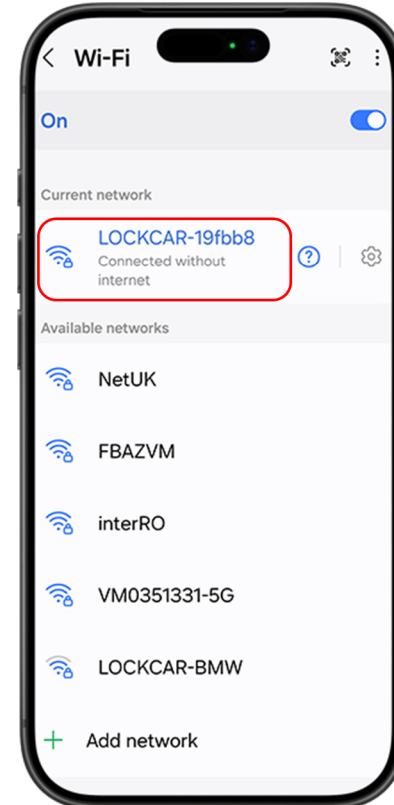


7. The connection will be
established Connected
without internet



8. Open the app to have
control the Immobiliser
from your phone

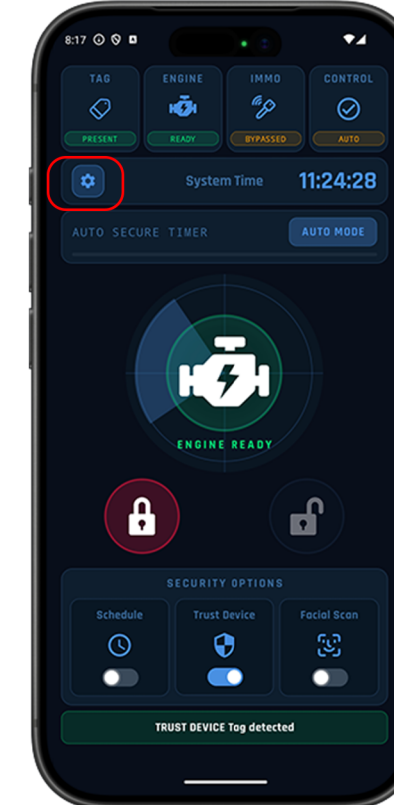

9. On the gear wheel to
open the settings menu,
for adjustments

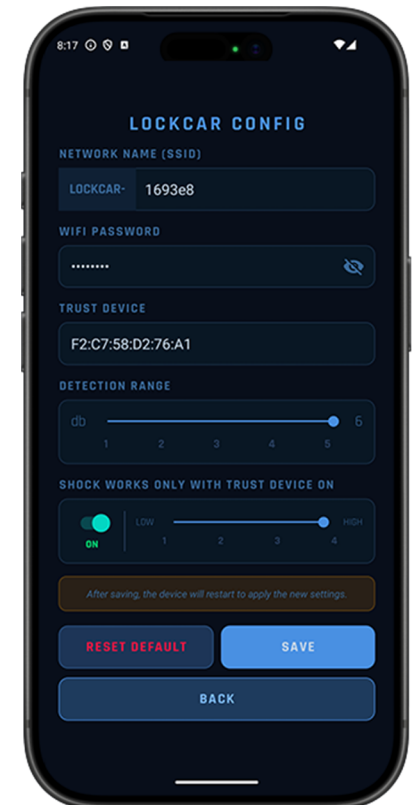

10. You can change
the network name,
password, adjusts.